


On King Cobra/Anaconda frames it is necessary to spread the grip to go over the protruding sideplate screws. Spread only slightly, just enough to clear the screws. Once the grip is seated fully, the sides will come together to sit flush with the gun frame.

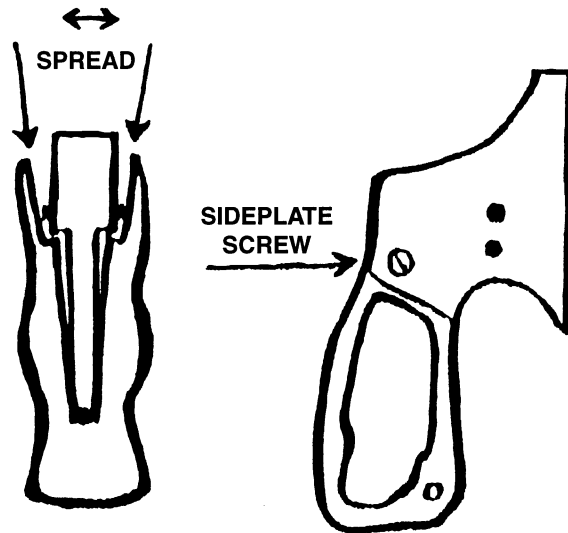

PRP-1004