


For late model MK I A-108 frames without bolt stop lever, it is recommended to install the enclosed shim into the left grip panel as shown. This will eliminate any “drifting” of the frame pin.

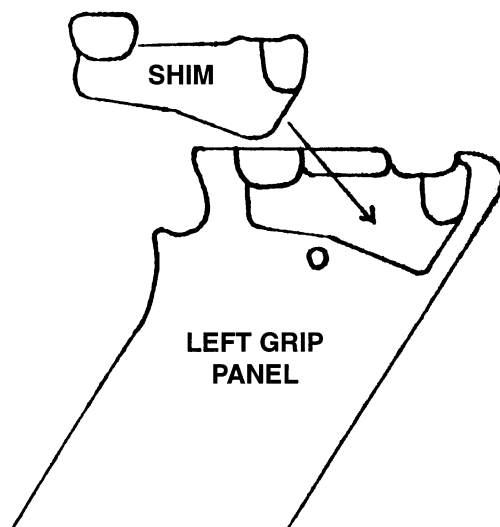

PRP-1003