


**IMPORTANT CONSUMER AND  
WARANTEE INFORMATION  
ON BACK OF PACKAGE**

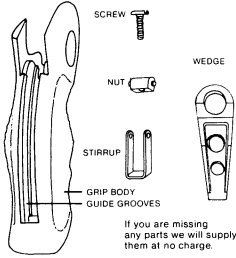

**CAUTION ON NYLON GRIPS:** Avoid hand contact with the edges of the backstrap opening. A slip of the hand during assembly or disassembly can cause painful cuts. Use a glove or wrap a towel if hand contact cannot be avoided. Familiarize yourself with warranty information on package back.

**1 Before starting to work, MAKE SURE THE GUN IS UNLOADED.**

**IMPORTANT!**  
Check all functions of your gun after grips are installed. **Test fire your gun.** This is especially important if weapon is to be used for law enforcement duty.

**A FEW WORDS ABOUT FIT**

It is a fact that gun frame dimensions vary from gun to gun. No grip is shipped out unless it fits and functions on **our** guns properly. Please keep this in mind.

It is imperative to make sure that every gun functions properly with aftermarket grips installed. Although the grip functions properly on our guns, it is the user's responsibility to check all functions of a gun after new grips are installed. This is especially important if the weapon is to be used for law enforcement duty. If you do not feel competent to check the proper function yourself, we suggest visiting your gunsmith to check this for you.

It is important to **test fire** the gun before using in the field.

**ASSEMBLY  
INSTRUCTIONS**


If you have any problems installing your **MONOGRIP®** please call us at (805) 239-1440. We will be glad to help make sure your grip fits perfectly.

Please use these instructions as a general guide. Due to the large number of different gun frame styles, your particular installation may be slightly different, although this same basic procedure will be used. Please look for any supplemental instructions that may be included in your package.


**If you have any problems, do not hesitate to contact us.**




PPP-N-1 (Rev. 5/94)

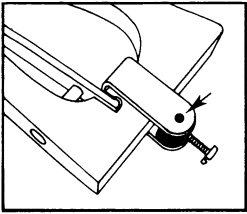


**5** When in place, the stirrup is a clamp that provides a screw thread hanging below the handle for securing **MONOGRIP®** to the frame. No alteration of the gun frame is needed. Remove screw from nut.

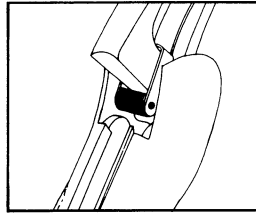


**6** Mate the gun handle and **MONOGRIP®** by first placing the stirrup into the internal guide grooves. If necessary, use the wedge to spread the grip.

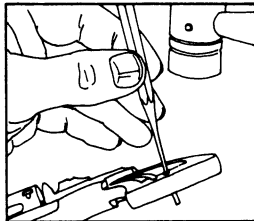


**2** Remove existing grips, and drift out the stock pin using the following method(s). Make sure gun frame is supported solidly on both sides of the pin, and use a small hammer and punch, to tap out the pin. Most pins are a slip fit and come out easily, on some Colt Pythons or guns with rusted or plated in pins, more effort may be required to remove the pin. If your pin doesn't come out easily, we recommend either having your gunsmith remove the pin, or if you have a vise make a set of wooden jaws with a hole drilled in one jaw; put the gun frame in the wooden jaws and carefully use the vise to press the pin into the hole in the one jaw.

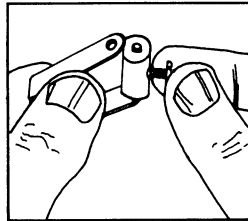


**3** Remove the screw / stirrup assembly that is inserted on the inside of your **MONOGRIP®**. Using your fingers, **SLIGHTLY** spread stirrup and remove screw and nut from stirrup; leave screw threaded in nut.

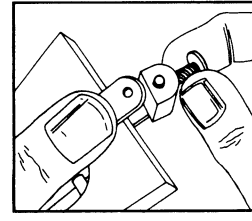


**4** Place the stirrup over the bottom strap of the handle and by using the screw as a handle, insert the nut in its original position placing flat side of nut against gun frame.

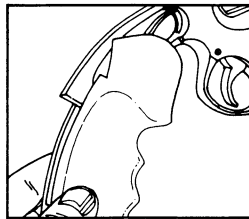

**7** **MONOGRIP®** should be guided up behind the trigger guard, then pivoted to cover the frame straps. The grip must mate with the semi-circular "loops" at the top of the gun handle. **MONOGRIP®** must be fully seated on the frame before inserting mounting screw.

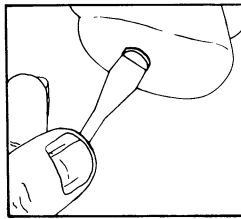

**8** Insert the screw so it enters the stirrup threads, and using an appropriate screwdriver, tighten the screw until snug, no tighter. Over-tightening does nothing to increase grip tightness and can damage the screw or stirrup.

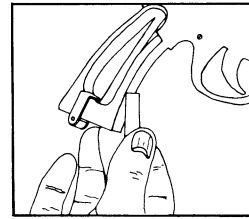

**9** Your **MONOGRIP®** is designed to fit an average size gun frame, however frame dimensions do vary slightly from gun to gun. If necessary your **MONOGRIP®** can be adjusted by placing small shim(s) of tape (as shown) on the lower corner of the front strap. Add or subtract tape until grip is flush with backstrap.