

ASSEMBLY INSTRUCTIONS

If you have any problems installing your **MONOGRIP®** please call us at (805) 239-1440. We will be glad to help make sure your grip fits perfectly.

Please use these instructions as a general guide. Due to the large number of different gun frame styles, your particular installation may be slightly different, although this same basic procedure will be used. Please look for any supplemental instructions that may be included in your package. **If you have any problems, do not hesitate to contact us.**



PRP-R-1 (Rev. 5/95)


A FEW WORDS ABOUT FIT

It is a fact that gun frame dimensions vary from gun to gun. No grip is shipped out unless it fits and functions on our guns properly. Please keep this in mind.

It is imperative to make sure that every gun functions properly with aftermarket grips installed. Although the grip functions properly on our guns, it is the user's responsibility to check all functions of a gun after new grips are installed. This is especially important if the weapon is to be used for law enforcement duty. If you do not feel competent to check the proper function yourself, we suggest visiting your gunsmith to check this for you.


It is important to **test fire** the gun before using in the field.

IMPORTANT CONSUMER AND WARRANTY INFORMATION ON BACK OF PACKAGE

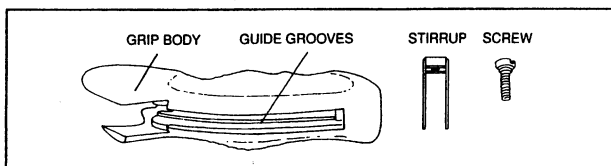


If you are missing any parts, we will supply them at no charge.


- 1** Before starting to work, **MAKE SURE THE GUN IS UNLOADED.** Remove existing grips.

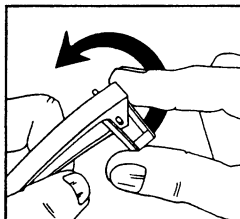


- 2** Place the stirrup over the bottom strap of the handle and rotate it until the hole in each side engages the stock pin.

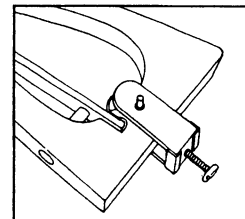

- 3** When in place, the stirrup is a clamp that provides a screw thread hanging below the handle for securing the **MONOGRIP®** to the frame. No alteration of the gun frame is needed. Remove the screw from the stirrup.

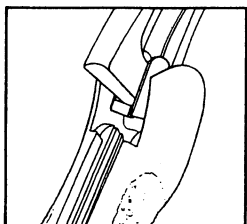


- 4** Mate the gun handle and **MONOGRIP®** by first placing the stirrup and stock pin into the internal guide grooves using your thumb to spread the grip.

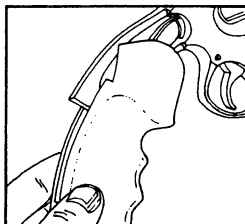

- 5** **MONOGRIP®** should be guided up behind the trigger guard, then pivoted to cover the frame straps. The grip must mate with the semi-circular 'loops' at the top of the gun handle. **MONOGRIP®** must be fully seated on the frame before inserting mounting screw.



- 6** Insert the mounting screw through the hole on the bottom of the grip. Insert the screw so it enters the stirrup threads, and using the appropriate screwdriver, tighten the screw until snug, no tighter. Over-tightening does nothing to increase grip tightness and can damage the screw or stirrup.

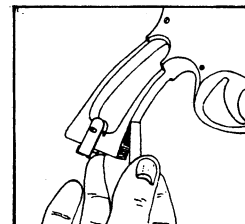

- 7** Your **MONOGRIP®** is designed to fit an average size gun frame, however frame dimensions do vary slightly from gun to gun. If necessary your **MONOGRIP®** can be adjusted by placing small shim(s) of tape (as shown) on the lower corner of the front strap. Add or subtract tape until grip is flush with back-strap.

IMPORTANT!
Check all functions of your gun after grips are installed. **Test fire your gun.** This is especially important if weapon is to be used for law enforcement duty.